

BaByliss[®] MEN

SUPER STUBBLE XTP
7898DU


SAFETY CAUTIONS

- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

IMPORTANT CHILD SAFETY

- **ALWAYS** keep out of the reach of very young children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- Do not immerse the appliance in water or other liquids. Keep the appliance dry.
- **UK Only:** Do not use this appliance in the bathroom.

- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- The appliance's charging stand and/or adaptor must be kept away from sources of water so that they do not fall into the water.
- **CAUTION!** Keep the power cord and the appliance dry. For appliances with a removable power supply unit, remove the power cord before cleaning or using the appliance under running water.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- **WARNING!** For the purposes of recharging the battery,

only use the detachable charging supply unit provided with this appliance (CA81). This symbol indicates there is a detachable power supply for means of charging.

- Do not leave the appliance unattended when switched on.
- Do not leave the appliance plugged in for more than 24 hours.
- Unplug immediately if any problems occur during use.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance may be used by children aged from 8 and older and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction on the safe use of the appliance and understand the hazards involved. Children must not play with the appliance.
- This product contains a (insert battery type) rechargeable battery that is not to be removed from the appliance for charging. The batteries in this appliance are non-replaceable. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal. If the battery leaks, avoid touching it and dispose of it at a recycling centre.
- The supply terminals are not to be short circuited.
- For domestic use only.
- This product complies fully with all appropriate EU

and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENTS

In everybody's interest and to actively participate in protecting the environment and human health:

- Do not discard your products with your unsorted household wastes.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the WEEE available in your area. In this way, some materials can be recycled, re-used or recovered.
- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.

For more detailed information about the disposal of this product, please contact your local household waste disposal service.

INSTRUCTIONS FOR USE

IMPORTANT! Only use the adaptor and attachments supplied with this appliance.

General

- Always inspect the appliance before use to ensure the trimmer blades are free from hair, debris etc.
- Use on clean, dry hair that has been combed until

Oiling Instructions


- For optimum cutting performance, it is highly recommended to oil the blades after every use.
- When using the oil for the first time, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors.
- Switch the appliance on.
- Holding the trimmer at a 45 degree angle, gently squeeze the oil tube and apply 2 drops directly onto the blades.
- Leave the unit on for a further few seconds to allow the oil to thoroughly spread along the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth before using on hair.

Charging the appliance

- This trimmer is equipped with lithium ion batteries.
- Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth fast trimming every time. Maximum battery capacity will only be reached after 3 charging and discharging cycles.
- Plug the power adapter into the socket on the underside of the charging stand.
- Plug the power stand adaptor into a suitable bathroom shaver socket. If you don't have a bathroom shaver socket, use the 3-pin plug adaptor supplied with the product. Place the 2-pin adaptor into the back of the supplied 3-pin plug adaptor and plug into a mains

power socket and switch on at the wall.

Note: Always place the trimmer in the base with the 'I/O' switch in the OFF position.

- When the unit is charging the display lights up indicating the running time. The minutes will gradually increase until it reaches maximum capacity of 70 minutes.
- A full charge will take 80 minutes and will supply enough power for minimum 70 minutes continuous cordless use. The approximate remaining using time is shown on the LED display.
- The Super Stubble XTP comes with a quick charge feature. A 5 minute charge will provide enough power for approximately 3 minutes use.
- In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 3 hours every 3 months approximately.
- When the LED display has less than 5 minutes left, the time symbol  indication will change to red.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the trimmer should be fully discharged and then recharged for 3 hours every six months.

Preparation for Use

Always inspect the super stubble before use to ensure the cutting head is free from hair and debris and is running smoothly.

Operation

To switch the Super Stubble XTP on, press the '0/I' button. The LED will show the selected cutting length and approximate usage time remaining. After 10 seconds, the blue LED for the usage time will switch off but the cutting length LED will remain illuminated whilst the motor runs. When there is approximately 5 minutes left shown on the LED display, the time symbol will change colour to red and will also start to flash. When the LED displays '00', this indicates that the unit needs to be recharged, however it may continue to run for a short while after.

Using the comb guide

The comb guide allows you to change the cutting length of your trimmer. You'll need to experiment to find your preferred length, but as a guide, 0.4mm will give you very short stubble, whilst 1.6mm will give you a longer stubble look. 2mm+ will give you a short beard.

- Ensure the comb guide is correctly positioned by pushing the comb guide gently downwards to secure into place.
- Use the digital touch control 'up' or 'down' buttons to adjust the telescopic comb guide to the required length.
- The cutting lengths are displayed on the LED screen in 'mm' – scroll through the available length settings with the digital touch controls. There are 24 length settings available: 0.4mm-5.0mm in 0.2mm increments.
- Select your required length – the length setting will then remain displayed on the LED screen.
- Press the power button to switch the super stubble on.

Memory Function

The stubble trimmer has a memory function that stores the last chosen length setting. When the unit is switched off the comb guide returns to 0.4mm position. When the trimmer is switched back on the comb guide automatically moves up to the last chosen length setting.

Travel lock feature

- The BaBylissMEN Super Stubble XTP has a travel lock feature which will lock all buttons from activating accidentally.
- To activate the travel lock, press and hold the 'I/O' button for 2 seconds until the time display counts down from 5 to 1. When the countdown reaches 1, the lock signal is shown.
- To de-activate the travel lock press and hold the 'I/O' button for 2 seconds until the time display starts to count down from 5 to 1 and the motor switches on and starts running. The travel lock is now de-activated.
- When you place the unit in the charger, the travel lock is automatically deactivated.

Using the trimmer without the comb guide

- Using without the comb guide is ideal for detailing/shaping and general tidying of edges.
- To detach the comb guide, gently hold the trimmer in one hand and with your thumb and index finger push up on each side of the comb guide (Fig. 1). Flip the comb guide to the back of the unit, gently pull down and secure under the latch to lock into place (Fig. 2). To release the comb guide, pull down and move away from the latch (Fig. 3).

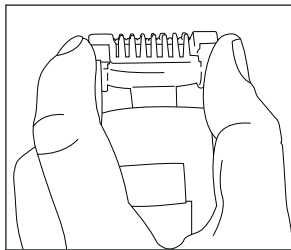 


Fig. 1

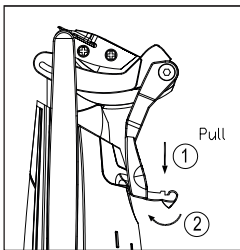 


Fig. 2

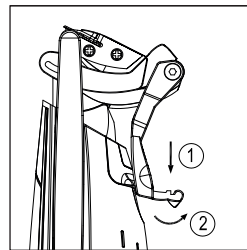 


Fig. 3

- Switch the Super Stubble XTP on by pressing the 'power on' button. The LED will illuminate and the blades will start to move.
- If you are looking for an ultra-close finish, you can use the trimmer without the comb guide. This will give you an extremely short cut.

IMPORTANT: When using the trimmer without the comb guide, the cutting length will be below 0.4mm. The length setting shown on the LED screen will no longer be relevant when the comb guide is detached.

Super Stubble Top Tips

- Use on clean, dry hair.
- If possible, when using for the first time, try and grow your facial hair for a few days before cutting so you can trim down to a level that is best for you.
- Set the cutting length as required.
- It is always best to start cutting with a longer length first, then trim again if the length is longer than desired.

- Hold the Super Stubble XTP against the hair, the teeth of the comb guide should be pointing upwards and should be flat against the face.
- Move the trimmer upwards through the hair, a little at a time, against the direction of hair growth. The floating and contouring head will follow the curves of your face to ensure both accuracy and comfort.
- The super stubble will work most effectively when cutting through the hair at its own speed – never force through the hair. You may experience a little resistance when trimming the neck area, where hair is thicker and grows in many different directions. This is completely normal.
- Just like shaving, extra time should be given when trimming under the neck area, as again this is where hairs grow in many different directions.
- Never switch the trimmer off whilst in the hair.

CLEANING & MAINTENANCE

- Regular cleaning will maintain the high performance of your Super Stubble XTP.
- Switch off and remove the power cord if connected.
- Detach the comb guide by gently lifting the front of the comb guide from both sides and flipping it over to the back of the unit and locking it into position by clicking it securely onto the fastener on the back of the handle.
- Use the cleaning brush supplied to brush away any hair and debris. Do not use a sharp object to clean the trimmer blade.
- The blades can be removed to aid cleaning.
- To remove the blades hold the handle of the Super Stubble XTP with one hand, place your thumb underneath the blades and push the blades away from the handle.
- Gently blow away any hair trapped beneath the blades.
- The blades can be rinsed under the tap. After rinsing the blades they may need to be oiled. See ‘Oiling Instructions’ above.
- Before re-attaching the blade to the trimmer, ensure the blades are dry and moving blade is in the centre. See (Fig. 4).

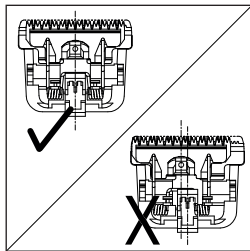 


Fig. 4

- Please do not use any chemical liquids when cleaning the trimmer.
- Ensure you clean the blades after each use and before storing away.



BATTERY DISPOSAL

This appliance contains Li ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line (refer to 'UK After Sales Service' section).

UK GUARANTEE

This BaBylissMEN appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

**unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.*

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

