

BaByliss[®]

THERMO-CERAMIC ROLLERS 3035U


SAFETY CAUTIONS

- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

WARNING THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. A circular prohibition sign with a diagonal slash over a stylized water tap icon.
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit

supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface.
- **WARNING!** Only hold the handle during use. Do not touch the hot surfaces of the appliance when in use as these can be extremely hot.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- The centre of the roller will be hot. Hold the rollers by

the ends to roll the hair. Do not touch the heating posts that hold the rollers.

- Never drop or insert any object into any opening.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- In the event of the appliance being left switched on, the appliance will automatically shut off after 72 minutes.
- Do not use any accessories other than those recommended by BaByliss.
- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

INSTRUCTIONS FOR USE

- Place the appliance on a level, heatproof surface. Do not open the lid at this time.
- Turn the appliance on by sliding the switch to the 'I' position.
- One roller has a 'heat ready dot' on top. The dot will turn from red to white, indicating optimum temperature has been reached and the rollers are ready to use. Open the lid and begin to style the hair.
- Comb through the hair to remove any tangles. Divide in to sections and select a roller. The rollers can be used on damp or dry hair.
- Begin placing the rollers at the top of the head and work down towards the nape of the neck.
- Take a section of hair the width of a roller, starting at the hair ends wind the hair around the roller, holding the hair taut. Keep the roller at right angles to the scalp, to ensure even curls.
- Secure the roller with one of the clips or metal pins provided. If using the metal pins, insert the pin over the roller, through the hair and away from you.
- Repeat throughout each section until you have used all the rollers.
- To turn off the appliance by sliding the switch back to the '0' position and unplug the appliance.
- Once the rollers have cooled, remove the rollers from the hair. Gently hold the roller in one hand and remove the clip or metal pin with the other. Slowly unroll the roller, being careful not to pull the hair as you unwind. Once the hair is loose from the roller, let it bounce back up.
- Let the hair fully cool so the curl can 'set', then style the hair as desired.
- Once the appliance has cooled down, replace all the clips and rollers back in the unit and close the lid.
- Allow the appliance to cool before storing away.

HEAT SETTINGS

If you have delicate, fine, bleached or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings. It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

- Select the desired heat setting by turning the heat dial accordingly.
- If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings.
- The rollers will be ready to use in just 5 minutes.

IMPORTANT! Be careful to avoid contact with the heated bars when removing and replacing the heated rollers.

IMPORTANT!

- The rollers have been specifically designed to reach high temperatures in order to produce fast and perfect curl formation.
- When applying the rollers to short or fine hair, allow the rollers to heat up until the heat ready dot turns white. Once the heat ready dot has turned white, turn off the unit and open the roller and clip lids. Allow the rollers to cool until they feel comfortable when applying into the hair. Failure to do so may lead to discomfort.
- Always take extra care to avoid the rollers coming into direct contact with the scalp.

AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the rollers are switched on for more than 72 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the on/off switch to 'I' position to turn the power on.

IONIC TECHNOLOGY

Turning on the appliance will automatically activate the ionic technology.

Please note: The release of the ions from the ports produces a slight buzzing noise.

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.
- Always store the appliance with the lid closed to protect it from dust
- Always unplug the appliance when not in use or before cleaning.
- To clean the rollers, use a damp cloth with some mild detergent and wipe over the rollers to remove any residue.
- Towel dry and leave rollers for 1 to 2 hours before using again to ensure they are completely dry before use.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:


Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

