

***BaByliss*® PRO**

S T Y L I S T T O O L S



Crimping Iron

BAB2512U


Crimping Iron

The Babyliss Pro Crimping Iron is designed to give perfectly defined, long-lasting texture. Ultra-fast heat up and variable temperature settings offer professional control while ceramic heating plates leave hair looking shiny and glossy.

FEATURES:

- 2.5" ceramic plates
- 25 heat settings
- Instant heat
- Cool touch heat resistant fabric
- On/off switch
- On indicator light
- Swivel cord

TEMPERATURE SETTING GUIDE

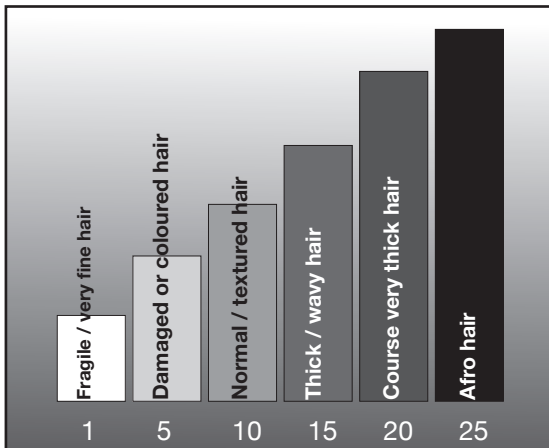

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet.

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.



- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped.
- In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance

coming into direct contact with the skin, in particular the eyes, ears, face and neck.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always ensure that this appliance is kept out of the reach of children at all times, particularly during use and whilst cooling.
- Allow appliance to cool before storing away.
- After use, do not wrap the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

OPERATING INSTRUCTIONS

- Plug the appliance into a suitable mains socket.
 - To switch the appliance ON, press the 'I/O' key. The ON indicator light will illuminate red.
 - Select the required heat setting using the temperature dial. There are 25 temperature settings to select from (refer to temperature setting guide table above). For delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings. Always start with the lowest temperature setting and increase the level of heat as required.
 - The appliance will almost instantly heat up to the chosen heat setting.
- IMPORTANT:** The plates will become very hot when the appliance is heated up. Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Always place on a firm surface for safety. Do not place the appliance on any heat sensitive surfaces.
 - After use, switch off and unplug the appliance. Allow to cool fully before storing away.

CLEANING & MAINTENANCE

The appliance may require cleaning due to a build up of residue from hair products.

To clean:

The appliance may require cleaning due to a build-up of residue from hair products.

- Ensure the appliance is switched off, unplugged and cool.
- Using a damp cloth and mild detergent or soap, wipe the appliance.
- Ensure the appliance has dried thoroughly before re-using.

IMPORTANT: Do not immerse the appliance in water or other liquids.

To help keep your styler in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance; instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

UK GUARANTEE

This BaByliss PRO appliance is guaranteed for salon use for 6 months. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre,
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW


Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or .

With this appliance, if a 13 amp plug is used, a 3 amp fuse should be fitted. If any other type of plug is used, a 5 amp fuse must be fitted at the distribution board.

