

BaByliss[®]

SUPER-X METAL SERIES NOSE, EAR & EYEBROW TRIMMER E112U


IMPORTANT SAFETY CAUTIONS

- Original instructions. Read these safety precautions carefully before using the appliance! This appliance should only be used as described within this safety caution sheet. Please retain for future reference.

IMPORTANT SAFETY

- **WARNING:** Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 h of ingestion. Seek medical attention immediately.
- **ALWAYS** keep out of the reach of very young children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure

that they do not play with the appliance.

- **WARNING:** Do not use this device in a bathtub, shower, or water-filled reservoir. 
- **WARNING:** Keep the appliance dry.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Customer Care Line. No repair must be attempted by the consumer.
- Only use the accessories supplied with this appliance.
- Do not leave the appliance unattended when switched on.
- Do not expose the appliance or battery to excessive temperatures.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This product uses 1x AA battery. (1.5V)
- Insert the battery as indicated on the inside of the battery compartment respecting the polarity. Full details can be found in the instruction booklet.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries must be removed from the device before being re-charged.
- If the appliance is to be stored unused for a long period,

the batteries should be removed.

- Do not use modified or damaged batteries.
- Different types of batteries or new and used batteries are not to be mixed.
- Before disposing of the device, remove all batteries and dispose of them in a container intended for this purpose. When the battery has run down, it should be disposed of at a recycling centre to safeguard the environment. If the battery leaks, avoid touching it and dispose of it at a recycling centre.
- For domestic use only.
- This product complies fully with all appropriate legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Customer Care Line.

WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENT

- In everybody's interest and to actively participate in protecting the environment and human health:
- Do not discard your products with your unsorted household waste. The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection system dedicated to the WEEE available in your area. In this way, some materials can be recycled, re-used or recovered.
- By ensuring this product is disposed of properly, you

will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.

- For more detailed information about the disposal of this product, please contact your local household waste disposal service.

Recycling batteries

- Some BaByliss appliances may have rechargeable batteries. Only for the purpose of recycling, these batteries must be removed from the appliance before it is discarded.
- Remove the batteries by carefully opening the appliance case using the appropriate tools, then dispose of the batteries at a collection point intended for this purpose.
- Please contact BaByliss for additional information on how to remove the batteries.

INSTRUCTIONS FOR USE

General

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
- Ensure the trimming heads are free from hair and debris (refer to 'Cleaning and Maintenance' section for further information).

Changing Trimmer Heads

- Your trimmer is supplied with 2 interchangeable cutting heads.
- To remove a trimming head, turn the head anti-clockwise until the 'I' mark aligns with the '←' mark, then lift the head gently. (Fig. 1).
- To reassemble the head onto the body, align the 'I' mark on the head with the '←' mark on the body and then turn clockwise until the 'I' mark aligns with the 'circle' mark on the body (Fig. 2).

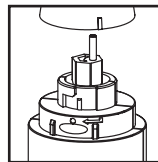 


Fig. 1

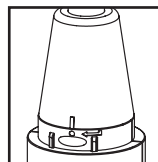 


Fig. 2

Using the Eyebrow Trimmer head

This attachment can be used to trim eyebrows, sideburns and tidy stray facial hair.

Without the comb guide

- Switch the trimmer on by turning the bottom section of the trimmer so that the two 'I' symbols align (Fig. 3).
- Move the trimmer upwards and outwards through the hair you wish to remove.

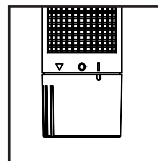 


Fig. 3

With the comb guide

- There are 2 comb guides. The smaller guide cuts to approximately 3mm and works well on necklines and sideburns. The larger guide cuts hair to approximately 5mm and is perfect for eyebrows and facial hair.
- Slide the comb guide onto the trimmer blade and push down to lock into place – you will hear a clicking noise when it's in position.

- Switch the trimmer on.
- Move the comb guide through the hair you wish to remove following the direction of hair growth until you reach the desired length.

TRIMMING TIPS

- Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
- Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
- Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

Using the Nose and Ear Trimmer head

- Switch the trimmer on by turning the bottom section of the trimmer so the two 'I' symbols align.
- Gently insert the trimmer into your nose or ear to trim unwanted hair.
- Gently move it in a circular motion.
- Never switch the trimmer off whilst in the nose and ear hair.

Note: Use this trimmer only at the entrance to the ears or nose. Do not use any deeper than this – this can cause injury.

CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use.

- Ensure the appliance is switched off.
- Gently blow any hairs from the trimmer head.
- Each head can be removed and rinsed under the tap.
- Do not allow the handle to come into contact with water; it is not waterproof.
- After cleaning, make sure to shake the trimmer head and allow it to dry thoroughly before replacing it on the handle.

Changing the battery

The trimmer requires 1x AA battery. To replace the battery, hold the top half of the trimmer with one hand and using the other hand turn the bottom section of the trimmer until the 'I' mark aligns with the '∇' symbol releasing the battery compartment (Fig. 4).

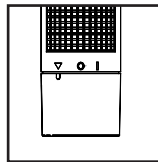 


Fig. 4

Insert the battery as indicated on the inside of the battery compartment. Replace the bottom section of the trimmer and twist back on to the main unit until the 'I' mark aligns with the '0' symbol (Fig. 5). If the appliance remains unused for a while or if the battery has run down, remove it from the appliance.

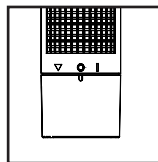 



Fig. 5

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

**unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc*

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.

If you should need to return your appliance to us please send it to the following address:

Customer Care Centre
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

