

***BaByliss*PRO®**



**FXONE LO-PRO TRIMMER**

**FX729U**



# BaBylissPRO®

**FXONE**

**Model: FX729U**


## **SAFETY CAUTIONS**


- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

## **IMPORTANT CHILD SAFETY**

- **ALWAYS** keep out of the reach of very young children (during and after use).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- Do not immerse the appliance in water or other liquids.
- Keep the appliance dry.
- **UK Only:** Do not use this appliance in the bathroom.

- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- The appliance's charging stand and/or adaptor must be kept away from sources of water so that they do not fall into the water.
- **CAUTION!** Keep the power cord and the appliance dry.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the charging adaptor or lead is damaged. In the event of damage, discontinue use immediately. If the charging adaptor or lead is damaged, it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- **WARNING!** For the purpose of recharging the unit, use one of the two detachable charging supply units provided with this appliance. (CA78M Regular Adaptor or CA88M USB Adaptor). This symbol  indicates

there is a detachable power supply for means of charging.

- Do not leave the appliance unattended when switched on.
- Do not leave the appliance plugged in for more than 24 hours.
- Unplug immediately if any problems occur during use.
- Do not place the appliance on any surface whilst in operation.
- Special care is required when using the appliance close to the ears, eyes and face.
- This appliance may be used by children aged from 8 and older and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction on the safe use of the appliance and understand the hazards involved. Children must not play with the appliance.
- This product contains a Li-ion rechargeable battery that has a removable battery that can be charged separately and shared across compatible products. Batteries must be disposed of safely at the end of life. Please take to a recycling centre for safe disposal. If the battery leaks, avoid touching it and dispose of it at a recycling centre.
- The supply terminals are not to be short circuited.
- This product complies fully with all appropriate EU and UK Legislation and the standards relevant to this type and class of appliance. We are an ISO9001:2015

certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line (refer to 'UK After Sales Service' section).

## **WEEE - END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENTS**

In everybody's interest and to actively participate in protecting the environment and human health:

- Do not discard your products with your unsorted household wastes.
- The WEEE (Waste electrical and electronic equipment) must be collected separately.
- Use the return and collection systems dedicated to the WEEE available in your area. In this way, some materials can be recycled, re-used or recovered.
- By ensuring this product is disposed of properly, you will help prevent potential negative consequences for the environment and human health due to possible content of hazardous substances.

For more detailed information about the disposal of this product, please contact your local household waste disposal service.

## TECHNICAL DATA

USB-C adaptor	CA88M
adaptor	CA78M
Vibrations	< 2.5 m/s <sup>2</sup>
LpA (dB(A))	< 70

### ON/OFF SWITCH


To operate, simply slide switch to «I» position. To stop operation, set to the «0» position. Make sure the switch is in the OFF (“0”) position when the trimmer is not being used.

**VERY IMPORTANT: BLADES MUST BE CLEANED AND OILED ON A REGULAR BASIS FOR PROPER FUNCTIONING. FAILURE TO REGULARLY CLEAN AND OIL THE BLADES WILL VOID THE WARRANTY.**

### REPLACING (REMOVING) BLADE SET

To remove the blade set, turn the trimmer to the OFF position and unplug it from the electrical outlet. Turn the trimmer upside down so that the teeth of the trimmer are facing down. Place the trimmer on a flat surface and using the screwdriver, loosen the fastening screws from the blade set. Remove the blade set from the trimmer (see Fig. 1).

 Fig. 1



To install or replace your trimmer blade set, reverse the procedure, aligning the blade cushion shaft into the moving blade cushion (see Fig. 2). With the blade held in place, replace blade screws and tighten loosely. Turn the trimmer over and align the blade set parallel to the trimmer’s upper housing.


## BLADE CARE

 Because the trimmer blades are precision-made they should always be handled with care and cleaned regularly to ensure maximum performance. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Use a clean cloth to dry the attachment, reattach and then store the trimmer to protect the blades until the next use.

Any other servicing should be performed by an authorized service representative, since the appliance has no other user-serviceable parts.


## DO NOT RINSE BLADE, TRIMMER HANDLE OR ADAPTOR AND REPLACING THE BLADE

Ensure the trimmer is switched off. Turn the trimmer upside down so that the teeth of the trimmer are facing down. Place the trimmer on a flat surface and using the screwdriver, loosen the fastening screws from the blade. Remove the blade from the trimmer (Fig. 1).



To install or replace your trimmer blade, reverse the procedure, aligning the blade cushion shaft into the moving blade cushion (Fig. 2). With the blade held in place, replace blade screws and tighten loosely. Turn the trimmer over and align the blade set parallel to the trimmer's upper housing.

 Fig. 2

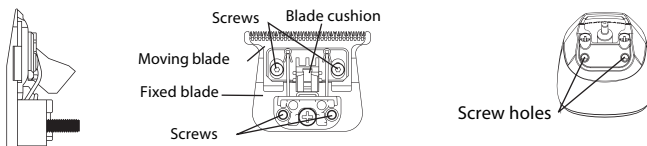





## ZERO GAP ADJUSTMENT TOOL


**IMPORTANT!** Only attempt to zero gap the blades by using the adjustment tool and following the instructions very precisely.

The adjustment tool is required to adjust the blades to zero gap, which will achieve a closer, more precise cut.

  
- Step 1 – Using the screwdriver included, gently loosen the two small screws on each side of the blade.
- Step 2 – Slide the zero gap tool over the fixed blade until it is tight against the back portion of the moving cutting blade.
- Step 3 – Using your fingers on each side of the zero gap tool, push up until the cutting blade is even with or slightly below the fixed blade.

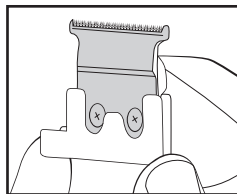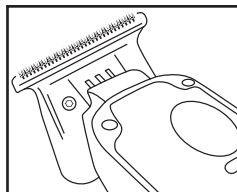

 
Be sure that the blades are aligned properly. The teeth of the smaller blade (cutter) should rest slightly below the upper edge of the larger blade (comb) — approximately 0,3 mm to 0,5 mm apart (Fig. 3). If the blades are not correctly aligned, they may cut or scratch your skin when trimming. Once the blades have been aligned, tighten the screws firmly.



 - Step 4 – **WARNING!** Make sure the moving cutting blade doesn't extend past the fixed blade. If the cutting blade extends past the fixed blade it can potentially cut the skin.

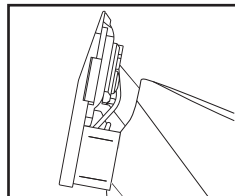

 
- Step 5 – Once the blade is adjusted to zero gap or your liking, gently tighten the two screws on

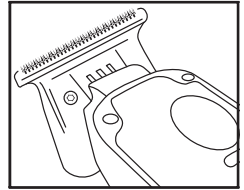

## BATTERY REMOVAL AND INSTALLATION


The FX729U trimmer features a removable, rechargeable, and interchangeable battery, so you can cut and style for extended amounts of time with minimal interruption. Be sure trimmer is in the OFF (“0”) position before removing or installing the battery.

 1. To remove the battery, press on the battery release button on the back of the trimmer handle toward the middle of the unit



Battery Release Button

 2. The battery will partially eject but needs to be pulled from the bottom of the trimmer to remove completely.
3. To install the battery, line up the keyway of the trimmer with the battery housing, aligning the arrow mark on the battery with the arrow mark on the trimmer. Insert the battery into the opening and push into the housing until the locking mechanism engages.

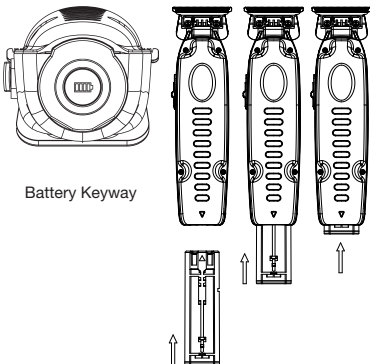

Battery Keyway

**WARNING** – Make sure the trimmer and battery are aligned properly before pushing battery all the way in. Do not force battery in if any resistance is felt.

## **DISPOSAL OF LITHIUM-ION BATTERIES**

1. The batteries for this trimmer set are protected in a plastic housing.
2. Press the battery release button and pull battery housing out of trimmer
3. No further disassembly of the battery unit is required.
4. Take to an authorized battery recycling center and recycle entire battery unit.

## **IMPORTANT**

Do not use this appliance with a damaged or broken comb, as it has the potential to result in facial injury.

Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. “0”) then remove plug from outlet. Keep the appliance cord away from heated surfaces.

Make sure the switch is in the OFF “0” position when the trimmer is not operating.

Plug charging stand into outlet to charge batteries. To disconnect, first remove batteries from charging stand, then unplug from outlet.

Use of a charging stand not sold by BaBylissPRO may result in risk of fire, electric shock, or injury to person.

Do not disassemble charging stand. Incorrect reassembly may result in a risk of electric shock or fire. When repair is required, send or take it to a BaBylissPRO Authorized Service Center.

The batteries for this trimmer are designed to be easy to use. However, like all batteries, they will eventually wear out. Do not attempt to replace the batteries. When replacement is required, contact a BaBylissPRO Authorized Service Center.

Batteries can be harmful to the environment if disposed of improperly. Many communities offer recycling or battery collection. Contact your local government about disposal practices in your area.

**WARNING:** never touch both terminals on trimmer with metal objects and/or body parts, as short circuit may result.

Keep away from children. Failure to comply with these warnings could result in fire or serious injury.

This trimmer is intended for trimming purposes only.

**This product is for commercial use.**

## CHARGING STAND INSTRUCTIONS

The FXONE Universal Battery Charging Stand can be powered by either the universal FXCORD (not included) or a USB-C adaptor.

To use a USB-C adaptor: Connect the USB-C adaptor to the USB-C port at the back of the FXONE Universal Battery Charging Stand, then insert the battery into the charger.

To use the universal FXCORD: Connect the standard charging cord (FXCORD) to the standard port at the back of the FXONE Universal Battery Charging Stand, then insert the battery into the charger.

 
To insert the battery into the charging stand: Align the arrow mark on the battery with the arrow mark on the charger, then insert the battery into the opening and push into the housing until the locking mechanism engages.

 
**Warning:** Only use with FXCORD AC adaptor CA78M (not included) or USB-C adaptor CA88M provided with the appliance.

Rated Output:

Universal FXCORD CA78M: 4.5VDC, 1.2A (not included)

USB-C adaptor CA88M: 5.0VDC, 2.0A

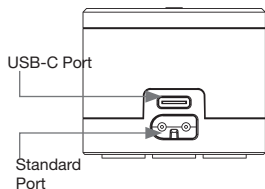

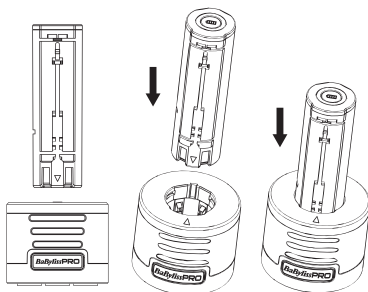

## **BATTERY/CHARGING INDICATOR (TOP OF FXONE BATTERY)**

Blue flashing – Charging

Blue solid – Charged (see charge levels below)

- The charging stand may become warm while charging. This is normal.
- Preserving the battery: In order to maintain the optimum capacity of the rechargeable battery, it should be recharged for 3 hours approximately every 6 months.

**WARNING:** If the charging light suddenly starts to flash rapidly, the battery is faulty. If this happens, stop charging, unplug the FXONE Universal Battery Charging Stand from the outlet/USB power source and contact our Customer Care Center for further advice.

## **BATTERY CHARGE-LEVEL INDICATOR**

 
The FXONE Universal Battery has a built-in 4-stage LED ring light to indicate charge level of the battery. To check charge level, press the central button on the bottom of the battery housing to display current charge level.

Full circle – 100% charge

$\frac{3}{4}$  circle – 75% charge

$\frac{1}{2}$  circle – 50% charge

$\frac{1}{4}$  circle – 25% charge

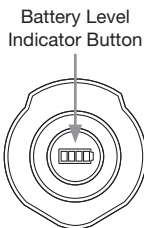

**Read these instructions carefully before connecting the charging stand to any power supply. OPERATION**

1. For dry use only. Do not expose to water.
2. When not in use, unplug unit completely.
3. Unit will become warm during operation.

**TRIMMER OPERATING PRECAUTIONS**

This trimmer has a removable rechargeable battery. Do not throw device or battery into fire, apply heat, or charge, use, or leave in a high-temperature environment.

If the trimmer is to be stored unused for a long period, the FXONE Universal Battery should be removed.

**UK GUARANTEE**

This BaByliss PRO appliance is guaranteed for professional use for 2 years and is only valid within the United Kingdom.

**Exclusions**

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet.
- 2.) The appliance has been purchased from an unauthorised stockist\*.
- 3.) Repairs or alterations have been attempted by unauthorised persons.
- 4.) The failure of the appliance is a direct result of misuse.
- 5.) The failure is a result of not following the instructions for use.

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

\*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished

products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com) for further information on authorised stockists.

**It is important to retain your proof of purchase. We recommend attaching your receipt to this page.**

**Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.**

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

**This guarantee is an additional benefit and does not affect your statutory rights as a consumer.**

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail [ukinfo@conair.com](mailto:ukinfo@conair.com).

## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).

Return address:


Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

**Please note this Instruction Booklet is not the guarantee.**

## **SAFE DISPOSAL**



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.



## UKCA DECLARATION OF CONFORMITY

*In accordance with UK Government guidance*

We, the undersigned, take full responsibility for the product's compliance.

Type of product	: Trimmer
Type number	: T182a
Trademark	: BaBylissPRO / Conair / CPL
With following characteristics	: Unit : 3.6VDC, 8.71Wh (2.42Ah) / 3.6VDC, 11.88Wh (3.3Ah) Charging stand: 4.5VDC, 1.2A, 5.4W / 5.0VDC, 2.0A, 10.0W Adaptor : 100-240V~, 50-60Hz, 4.5VDC, 1.2A, 5.4W / 5.0VDC, 2.0A, 10.0W
Country of origin	: China
Manufacturer name	: Conair UK
Address	: PR7 7DW

The object of the declaration described above is in conformity with the relevant UK Statutory Instruments (and their amendments):

2016 No. 1101	Electrical Equipment (Safety) Regulations 2016
2016 No. 1091	Electromagnetic Compatibility Regulations 2016
2012 No. 3032	Restriction of the use of certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
2019 No. 539	Ecodesign for energy-related products and energy information (Amendment) (EU Exit) Regulations 2019
2008 No. 1597	Supply of Machinery (Safety) Regulations 2008

References to the relevant designated standards used or references to the other technical specifications in relation to which conformity is declared:

LVD	BS EN 60335-1	2012	A2 :2019 ; A15 :2021
	BS EN 60335-2-8	2015	A1 :2016 ; A12 :2022
	BS EN 62233	2008	
EMC	BS EN IEC 55014-1	2021	
	BS EN IEC 55014-2	2021	
	BS EN IEC 61000-3-2	2019	A1:2021
	BS EN 61000-3-3	2013	A1:2019; A2:2021; AC:2022
RoHS	BS EN IEC 63000	2018	
	BS EN 62321-3-1	2014	
	BS EN 62321-5	2014	
	BS EN 62321-4	2014	A1:2017
	BS EN 62321-7-1	2015	
	BS EN 62321-7-2	2017	
	BS EN 62321-6	2015	
	BS EN 62321-8	2017	
EuP	BS EN 50563	2011	A1:2013

*The technical documentation is available from:*

*Name: The Conair Group Ltd,*

*Address: Unit 4, Revolution Park, Buckshaw Avenue, Buckshaw Village, Chorley, PR7 7DW*

Signed by and on behalf of:

BABYLIS FACO S.R.L. (authorised by BABYLIS S.A.R.L. and The Conair Group Ltd)  
Avenue de l'Indépendance 25, B-4020 Wandre, Belgique  
Place: Wandre







