

BaByliss[®]

HYDRO-FUSION AIR STYLER 2973U


SAFETY CAUTIONS

- Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

WARNING! BURN HAZARD : THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. 
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current

device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- This appliance is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the appliance to the '0' position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK

After Sales Service' section for further information).

- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Always ensure that the rear air filter is kept away from hair during use to prevent it being dragged into the fan which may cause the appliance to overheat.
- Take care using this appliance when wearing jewellery, in particular necklaces and earrings to avoid entanglement in the rotating brush head.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- Do not use any accessories other than those recommended by BaByliss.
- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015

certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance, please contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

INSTRUCTIONS FOR USE

- Ensure the hair is 80% dry and combed through to remove any tangles. Divide the hair into sections ready for styling.
- Slide the switch to the heat setting suitable for your hair type to turn the appliance on. **Please note:** The blue LED light will illuminate to indicate the ionic feature is activated.
- Place the brush underneath the hair section, close to the scalp and hold for a few seconds to boost volume at the roots.
- Use the brush to lift the hair at the roots as you dry.
- Move the appliance down through the hair and start to rotate the brush away from your head by pressing and holding the appropriate rotation button.
- As you do this, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair.

IMPORTANT! It may take several attempts to perfect this technique, if the brush spins too quickly, simply release the rotation button and remove from the hair.

- As you reach the ends of the hair section, continue rotating the brush to roll the ends under.
- For even more volume, place the brush at the end of the hair section and allow the brush to rotate along the hair section by pressing and holding the appropriate rotate button. Wind the entire section of hair around the barrel until you reach the root. Release the rotate button and then hold the brush in the hair for a few seconds.
- Repeat for each section of hair.
- After use, slide the switch to the '0' position to switch off and unplug the appliance.

- Allow the appliance to cool before storing away.
- Place protective cover over the brush head to protect the bristles. (See 'Protective Cover' section for more information).

Heat Settings

There are 2 heat settings plus a cool setting. Use the cool setting on warm hair to set your style. Slide the switch to the '*' position to select the cool setting, the 'I' position to select the low heat, and the 'II' position to select the high heat.

If you have delicate, fine bleached or coloured hair, use the lower heat setting. For thicker hair, use the higher heat setting.

Rotation Settings

To make the brush head rotate, press and hold the buttons marked << and >>. This will make the brush head rotate clockwise and anti-clockwise.

Protective Cover

After each use, always ensure the protective cover is placed over the brush head. This protects the bristles from damage. When placing the protective cover over the brush head, ensure the grooves line up with the top of the airstyler so it slides easily into place.

Please note: The diagram on the protective cover demonstrates the direction it should be placed onto the brush head. If placed incorrectly it may be difficult to remove.

CLEANING & MAINTENANCE

To help keep your appliance in the best possible condition, follow the steps below:

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.

- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

Cleaning the Rear Filter

- Ensure the appliance is switched off, unplugged and cool.
- Holding the handle of the appliance firmly, twist the rear filter to the left to remove.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by aligning the grooves and turning to the right until the filter clicks back in to place.

For more information on this appliance visit www.babyliss.co.uk

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 2 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet

- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:


Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.