

BaByliss[®] PRO
STYLIST TOOLS

TITANIUM EXPRESSION



BIG HAIR PRO



CONGRATULATIONS ON YOUR TITANIUM EXPRESSION PURCHASE

With over 50 year's heritage, BaByliss PRO remains the choice of the world's best professional stylists. When it comes to perfectly styled hair our mission is to create styling tools that delivery the very highest results.

We hope you enjoy using your new product from our Titanium Expression range; a luxurious collection of professional hair tools that combine high-fashion styling with innovative technology to help you achieve fast, lasting results with a flawless finish for salon performance every time.

BAB2778U



Premium titanium gives superior smoothness and ionic conditioners deliver exceptional frizz-control for flawless results with incredible shine.

IMPORTANT SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be

used, cleaned or maintained by children.

- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical

circuit supplying the bathroom.

Ask your installer for advice.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.



- Do not use this appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage contact the Conair

Customer Care Line (refer to 'UK After Sales Service' section for further information).

- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the airstyler to the "0" position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug, and contact the Conair Customer Care Line (refer to 'UK

After Sales Service' section for further information).

- Do not place the appliance on any heat sensitive surface whilst in operation or whilst the product is cooling.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the ears, eyes, face and neck.
- Always ensure that the rear air filter is kept away from hair during use to prevent it being dragged into the fan which may cause the appliance to overheat.
- Take care using this appliance when wearing jewellery, in particular necklaces and earrings to avoid entanglement in the rotating brush head.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- After use, do not coil the lead around the appliance as this may cause damage to the lead. Instead, coil the lead loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).


GETTING TO KNOW YOUR BIG HAIR PRO

This professional hot air styler creates dramatic volume and shape with rotating action for an easy blow-dry finish. The 50mm barrel with a premium titanium finish and soft bristles smooth the hair to give flawless results. Ionic conditioning delivers exceptional frizz control for superior shine.

FEATURES

- 50mm barrel for dramatic volume and shape
- Rotating action for an easy, blow-dry finish
- Premium titanium gives flawless results
- Soft bristles gently grip hair to smooth and control
- Advanced ionic conditioning
- 700W
- 3 heat/speed settings
- Protective shield
- Salon length 2.7m swivel cord

OPERATING FEATURES

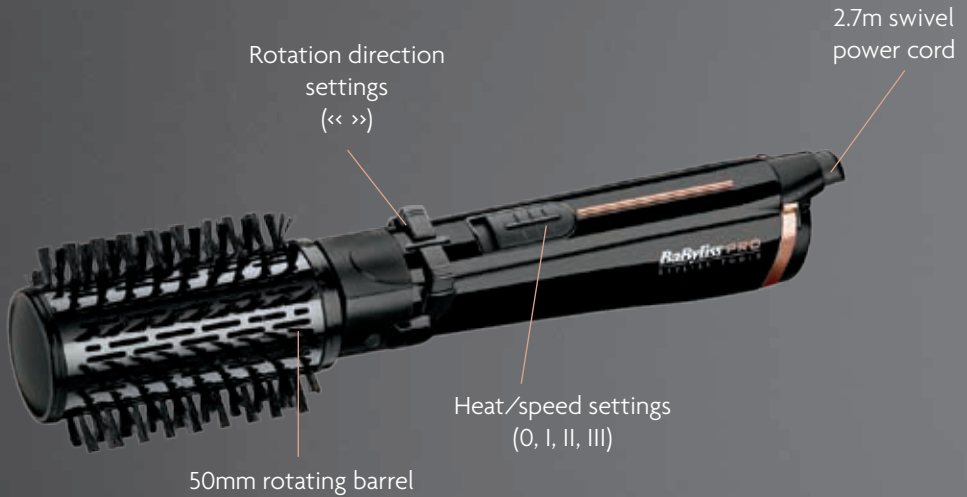

HEAT/SPEED SETTINGS

The Big Hair Pro features a choice of 3 heat/speed settings.

Use setting 'I' for a lower heat and slower rotation speed ideal for finer hair styles.

Use setting 'II' for a mid-heat and mid-rotation speed ideal for use on medium length hair.

Use setting 'III' for a high heat and fast rotation speed ideal for use on longer or thicker hair.

IMPORTANT! If the maximum setting is too hot for the hair type then select a lower temperature setting.

ROTATION SETTINGS

To make the brush head rotate, press the buttons marked « and », these buttons will make the brush head rotate in a clockwise or anti-clockwise direction.

When the air styler is set on the high heat setting the brush rotation will be faster.

When the air styler is set on the medium heat setting the rotation will be slower.

When the air styler is set on the low heat setting the rotation will be at it's slowest.

HOW TO USE YOUR BIG HAIR PRO

- Blow dry hair using a hair dryer until it's around 80% dry and separate into sections.
- Select the best heat/speed setting for your hair type using the slide switch.
- To create volume at the roots, take a section of hair and use the brush to lift the hair at the roots. Hold for a few seconds for extra lift.
- To create shape at the ends of the hair, run the brush from the root to the ends. As you reach the end of the hair hold the appropriate rotation button so the brush spins away from your head.
- As the brush rotates, resist the rotation of the brush by pulling the brush downwards. This will create tension through the section of hair to smooth and shape the ends.
- Repeat as necessary on all sections of hair.
- Switch the styler off by switching the slide switch to the '0' position. Remove from the socket, allow to cool and place the protective shield over the brush head to protect the bristles, before storing away.

PROTECTIVE COVER

After every use, always ensure the protective cover is placed over the brush head. This protects the bristles from damage. When placing the protective cover over the brush head, ensure to line it up with the grooves around the top of the airstyler so it slides easily into place.

NOTE: The diagram on the protective cover demonstrates the direction it should be placed on to the brush head. If placed on incorrectly it may be difficult to remove.

CLEANING & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

General

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side when storing away.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

Cleaning the Filter

- Unplug the appliance and let it cool completely before cleaning.
- Holding the handle of the appliance firmly pull the top of the rear filter towards you, this will enable the rear filter to open.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by pushing back into position.
- To clean the outside of the appliance, wipe with a damp cloth. Make sure no water enters the appliance and it is completely dry before use.

UK GUARANTEE

This BaByliss PRO appliance is guaranteed for salon use for 6 months.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com.


The return address is:

Customer Care Centre,
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the \oplus symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.

BaByliss[®] **PRO**
STYLIST TOOLS