

BaByliss[®]

CURL & WAVE TRIO STYLER 2750U


SAFETY CAUTIONS

- Original instructions. Read these safety precautions carefully before using the unit! This appliance should only be used as described within this instruction booklet. Please retain for future reference.

WARNING! BURN HAZARD: THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. 
- **Outside the UK:** If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current

device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the appliance into water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, discontinue use immediately. Contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use, do not place the appliance on any heat sensitive surface, even when using the heat mat provided.
- **WARNING!** Only hold the handle during use. Do not touch the hot surfaces of the appliance when in use as these can be extremely hot.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular

the eyes, ears, face and neck.

- In the event of the appliance being left switched on, the appliance will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply slide the switch to the '0' setting, then slide the switch to the heat setting suitable for your hair type to turn the power on.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand, the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
- Allow the appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- Do not use any accessories other than those recommended by BaByliss.
- Always unplug the appliance when not in use or before cleaning.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any queries regarding product safety and compliance,

please contact the Conair Customer Care Line. (See 'UK After Sales Service' section for further information).

INSTRUCTIONS FOR USE

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling.
- Fit the required attachment as described below, ensuring that the attachment is locked into position.
- Plug the appliance into a suitable mains socket and slide the switch to the 'I' to turn on, the 'on' indicator light will illuminate and will flash until the heat setting selected has been reached.
- Always place on a firm surface using the safety stand on the base of the appliance. Do not place the appliance on any heat sensitive surface.
- Allow the appliance to heat up.
- After use slide the switch to 'O' to turn off and unplug the appliance.
- Allow to cool before storing away.

IMPORTANT! The barrel of the appliance will become very hot when plugged in and switched on. Before fixing or removing any attachments, ensure the appliance is completely cool, switched off and is unplugged.


3 BARREL ATTACHMENTS



To create curls, waves and texture:

- Use the conical wand to create smooth curls
- Use the oval wand to add volume and loose waves
- Use the twisted wand to create a beachy textured finish

Fitting The Attachments


IMPORTANT! Before fixing or removing attachments, ensure the appliance is cool, switched off and is unplugged.

- Turn the locking ring on the handle as far as possible to the right to the release position marked with the unlock  symbol .
- Align the attachment to the locking ring on the power handle.
- Push the attachment into the power handle until the heat rest is flush against the locking ring.

- If there is resistance, check the locking ring is rotated as far as possible to the release position marked with the unlock  symbol.
- Once the attachment is in place, secure it by turning the locking ring as far as possible to the left to the lock position marked with the lock  symbol.

Removing The Attachments

IMPORTANT! Before fixing or removing any attachments, ensure the appliance is cool, switched off and is unplugged.

- Turn the lock ring as far as possible to the release position marked with the unlock  symbol .
- Pull the attachment from the handle.

Instructions for use - Oval and Conical Wand barrel attachments

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- Wind the hair around the barrel at a slight angle, so the hair wraps around the chosen barrel in a spiral motion. As you wind the hair around the barrel, ensure the hair is distributed evenly so the entire section is touching the barrel, try not to overlay the hair. If using the conical barrel attachment, start winding hair at the thicker portion of the barrel.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
- To remove the appliance from the hair, pull appliance away.
- Allow the curl to cool before styling.
- Repeat on each hair section.
- After use, switch off and unplug the appliance.
- Allow to cool before storing away

Instructions for use - Twisted Wand

- Ensure the hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling and allow the appliance to heat up.
- To create texture through the hair, wind each section around the barrel

- spirally distributing over all sections of the barrel. Take care to avoid the hot surface of the barrel touching the scalp, face, eyes and neck.
- Hold in place for 5-10 seconds depending on the texture and length of your hair.
 - To remove the appliance from the hair twist the appliance away.
 - Allow the curl to cool before styling.
 - Repeat on each hair section.
 - After use, switch off and unplug the appliance.
 - Allow to cool before storing away.

Heat Settings

If you have delicate, fine, bleached or coloured hair, use the lower heat settings. For thicker hair, use the higher heat settings. It is suggested to always complete a test on initial use to ensure the correct temperature is used on the hair type. Start on the lowest setting and increase the temperature until desired result is achieved.

Below is a guide of the temperature settings:

- 0 = OFF
- I = 180°C
- II = 210°C

Heat Protection Mat

This appliance comes with a heat protection mat for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow the appliance to fully cool down before storing away. Continue to keep out of the reach of children as it will remain hot for several minutes.

Heat Protective Glove

IMPORTANT! A universal heat protective glove has been supplied to help protect the hand from temporary contact with the barrel when wrapping the hair around the appliance. Please note the heat protective glove is only designed to give initial contact protection. Discomfort will

be caused with prolonged contact with the hot surface.

Auto Shut Off

This appliance has an automatic shut off feature for added safety. If the wand is switched on for more than 72 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the switch to the '0' setting, then slide the switch to the relevant setting to turn the power on again.

CARE & MAINTENANCE

To help keep your appliance in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

For more information on this appliance visit www.babyliss.co.uk

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 3 years and is only valid within the United Kingdom.

This guarantee covers consumer use only **i.e.** defects occurring under normal use within the home from date of purchase or date of delivery, whichever is later.

If the product develops a fault due to defects in materials or manufacture **within 12 months** from the date of purchase, to avoid delays and unnecessary inconvenience, where possible please return the product to the point of purchase for an exchange.

If the product develops a fault due to defects in materials or manufacture **after 12 months** from the date of purchase, and within the guarantee

period, Conair UK After Sales Service will repair or replace the product.

Exclusions

This guarantee will no longer be valid meaning that The Conair Group Ltd will not be liable to repair or replace your product where:

- 1.) The appliance has been used on a voltage supply other than that which is marked on the product, or advised within this instruction booklet
- 2.) The appliance has been purchased from an unauthorised stockist*
- 3.) The appliance is used for professional / non domestic usage
- 4.) Repairs or alterations have been attempted by unauthorised persons
- 5.) The failure of the appliance is a direct result of misuse
- 6.) The failure is a result of not following the instructions for use

This guarantee does not cover any cosmetic damage due to misuse of the product nor any damage to persons or property that occurs because of product misuse.

*unauthorised stockists include, but are not limited to online auction sites, private sellers and those selling second hand goods, refurbished products etc.

Please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com for further information on authorised stockists.

It is important to retain your proof of purchase. We recommend attaching your receipt to this page.

Even where a refund may be applicable, no refund will be provided without a valid receipt or proof of purchase, we will only be able to offer a repair or replacement service. Please note this does not apply if the product was purchased directly from The Conair

Group Ltd.

Guarantees on replacement products run from the original purchase date or date of delivery, whichever is later, and **not** from the date of replacement.

This guarantee is an additional benefit and does not affect your statutory rights as a consumer.

If you have any queries regarding this guarantee please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail ukinfo@conair.com

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03705 133 191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com

Return address:


Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

Please note this Instruction Booklet is not the guarantee.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

